


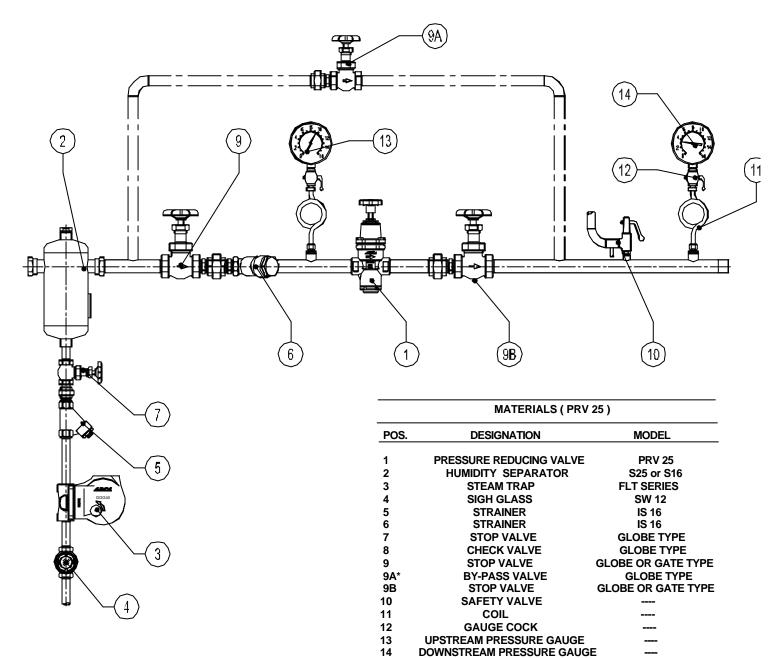

PRESSURE REDUCING VALVE PRV25 Typical Reducing Valve Installation



Remarks :

* By-pass is optional .In case the by-pass is not allowed than stop valve 9B should be placed after pressure gauge 14 allowing the isolation of safety valve.

PN classes and materials according to the operating pressures.

Installation instructions are available (IMI - PRV25) and typical assembling drawing .

Special assembling designs may be produced on request .

